


"530," "630," AND "730" SERIES
GASOLINE AND ALL-FUEL TRACTORS
Generator, Ignition, and Starting Wiring

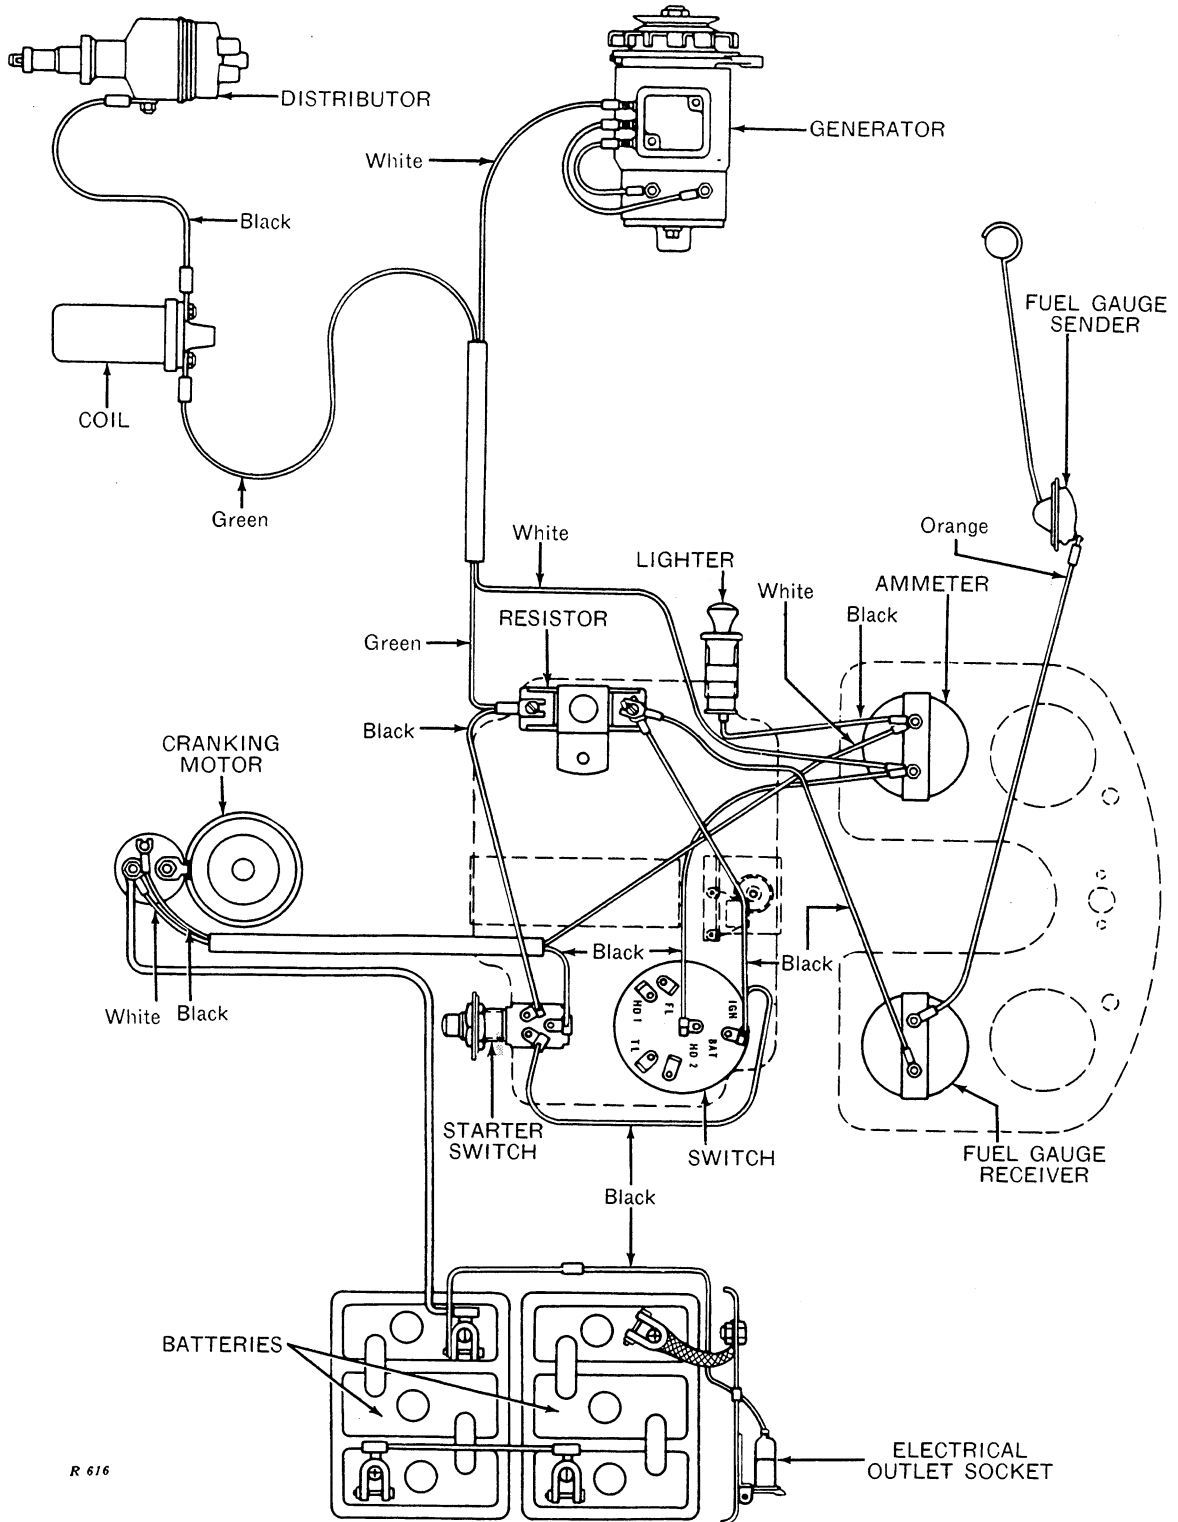


R 616

(For "LAMP WIRING," see page 80-5-23)



"530," "630," AND "730" SERIES
LP-GAS TRACTORS
Generator, Ignition, and Starting Wiring

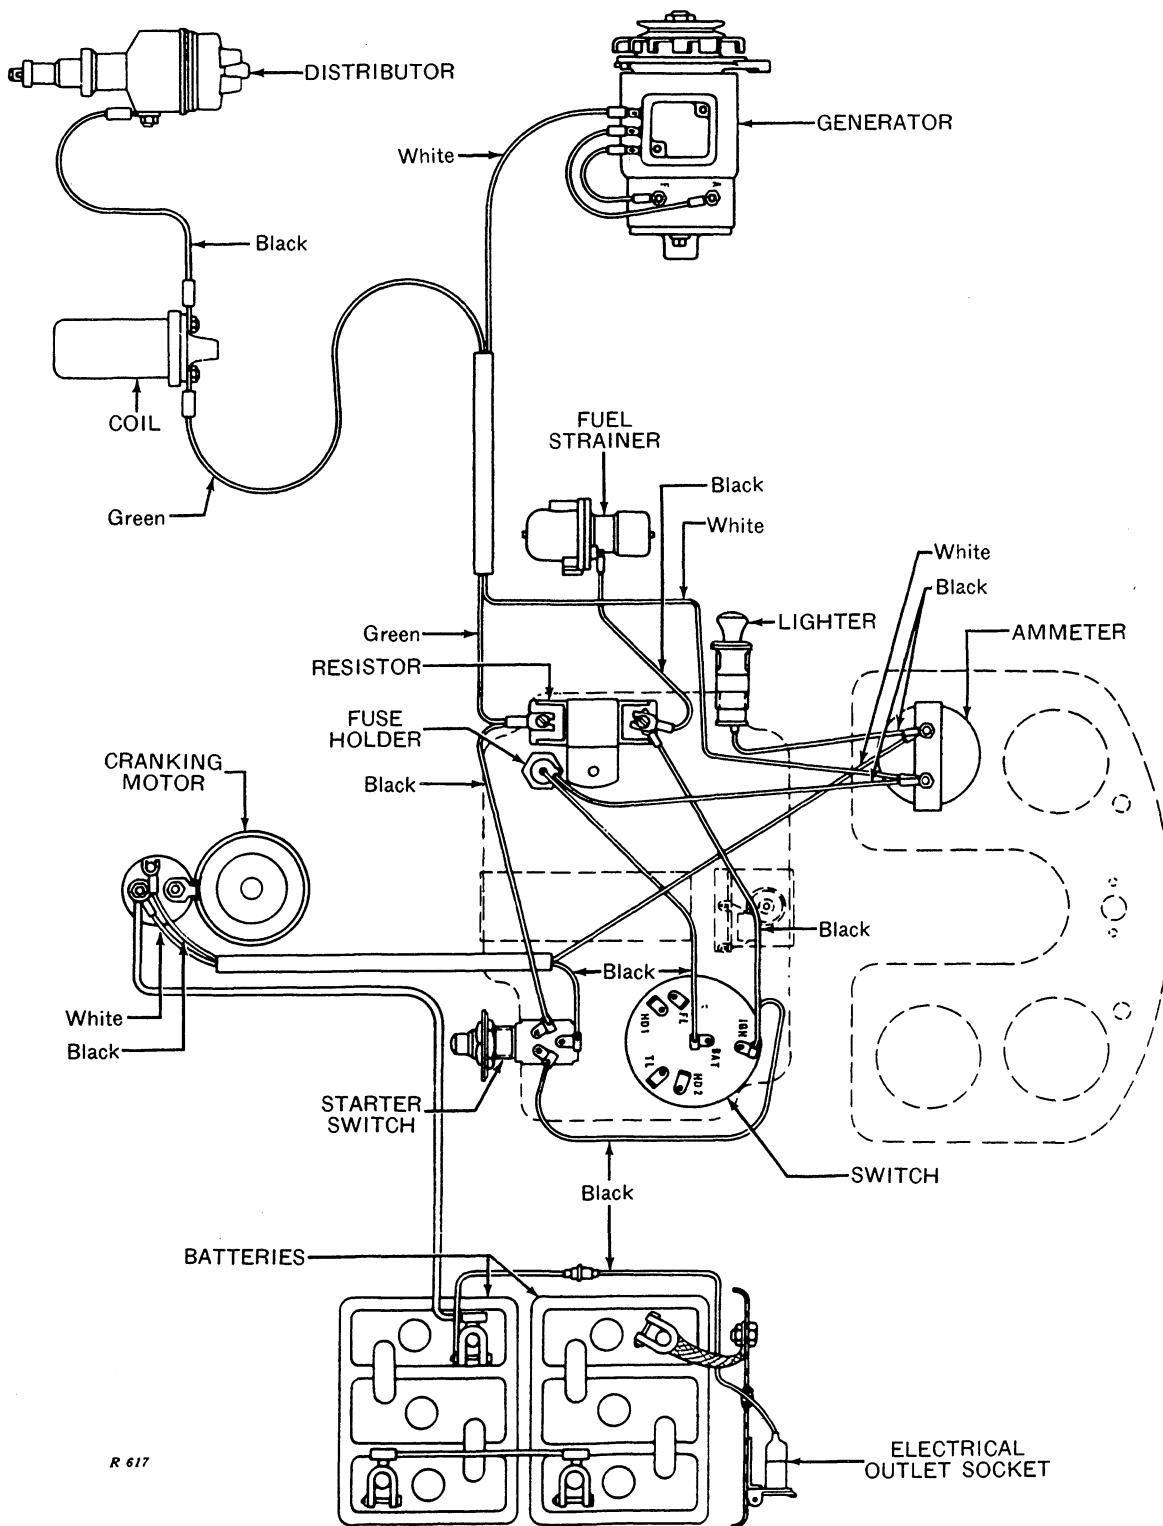


R 617

(For "LAMP WIRING," see next page)




"530," "630," AND "730" SERIES
GASOLINE, ALL-FUEL, AND LP-GAS TRACTORS --Continued

Lamp Wiring

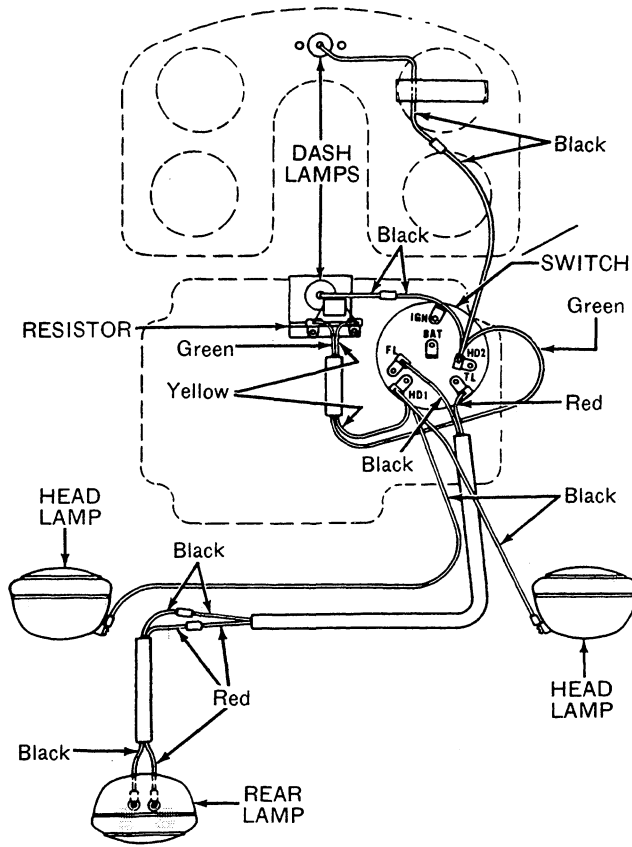

R 618

TWO-HEAD LAMP
WIRING

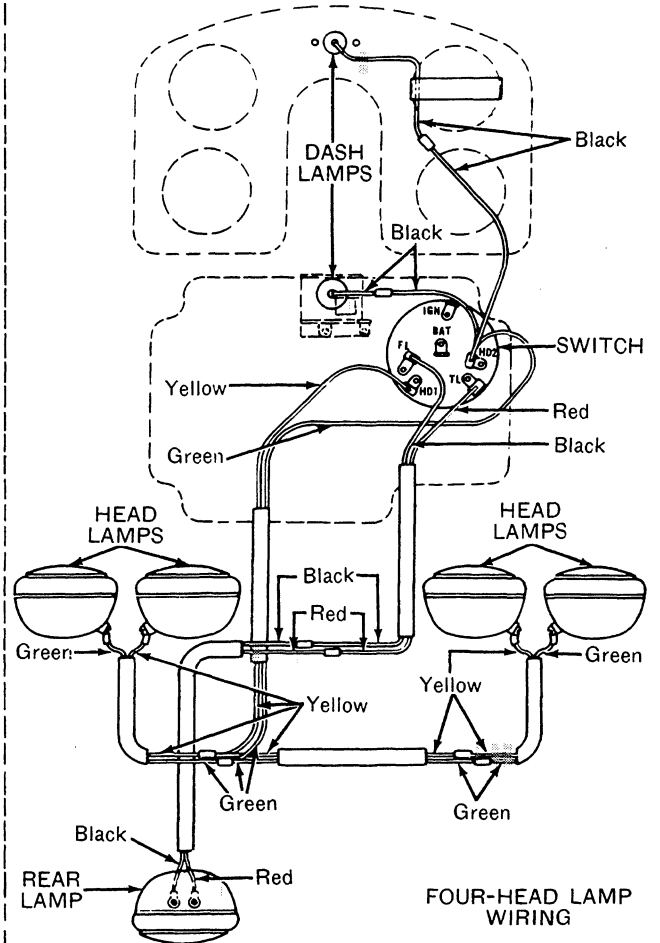

FOUR-HEAD LAMP
WIRING

